

Mouse Trak Programming Instructions.

This instructions apply to the RS232 Desktop models.

Your ITAC Systems Trackball has been designed with user configurable features to improve your efficiency. The default setup is as follows:

Left Key = Primary Function

Right Key = Secondary Function

Middle Key = Auxiliary Function

To configure the Mouse-Trak for Left handed operation, chord (press simultaneously) the Left, Right and Speed keys for a couple seconds. The key configuration will then be:

Right Key = Primary Function

Left Key = Secondary Function

Middle Key = Auxiliary Function

Chording the Left, Right, Middle and Speed keys will allow the middle key to generate a Left “Click and Drag” for the primary function. (Left when in Right-Hand mode). Chording these keys a second time will causes the middle key to revert to the auxiliary function.

Chording the Right and Speed keys will allow the key assigned as a secondary function (the Right key in in Right-hand mode) to operate in “Click and Drag” mode for the secondary function.

Chording the Left, Right and Middle keys will allow the Middle key to generate a Double-Click as the primary function. (Left when in Right-Hand mode). Chording these keys a second time causes the middle key middle key to revert to the auxiliary function.